



Anchor Saver®, LLC


www.anchorsaver.com

Instructions for Anchor Saver Custom Made Products

This is what your Custom Anchor Saver will Look like.

This model is specifically designed for boat set ups where there is a short distance between the end of the Anchor shank and the entry point to the Windlass (less than 12"). Your providing us with accurate measurements will enable us to provide a perfect fitting product. It is also helpful to provide us with photos and overall views of your Anchor and windlass. Once we have the information needed we will ship within one week. **It is also important that you advise us if you have an anchor Lock in line between the Anchor and the Windlass.**

1. Measure the distance from the end of the Shank Of the Anchor (a) to the entry point of the Windlass (b)

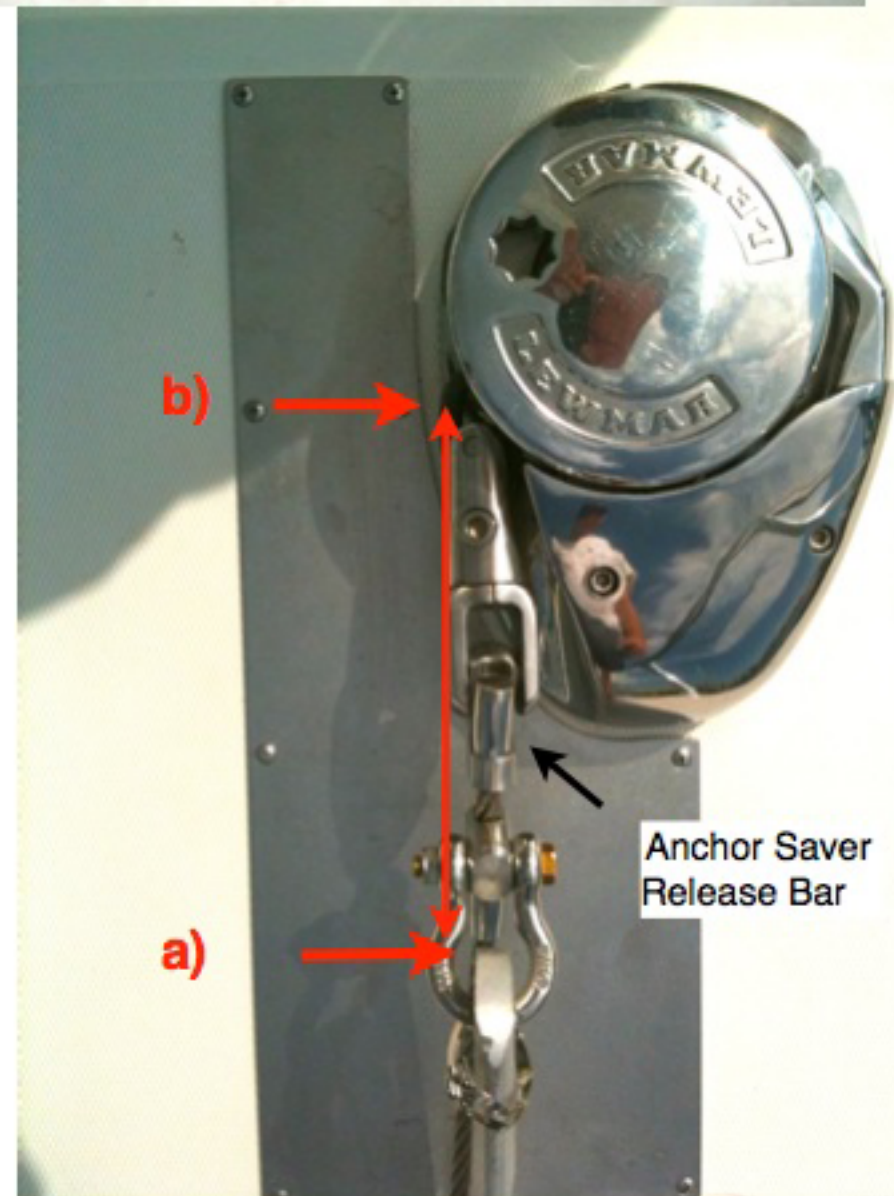

2. Measure Your Anchor from the Center of the Crown Eye Hole to the very end of the Shank (as pictured). This requires an accurate measurement.

