


# Installation for most anchors

1) Attach loop of cable to crown eye end using shackle  
note: keep eye of cable parallel to shank for step (2)



2) Slip Shackle into Shank Eye and attach the Stainless Steel Wire Tie loosely. Shackle should move freely. This saves your shackle on a break away.

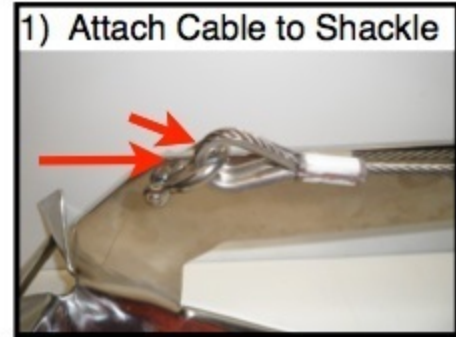

3) With Shackle hanging BELOW the Anchor Shank, move Release Bar up into the Shackle. Insert the Release Pin through the Shackle and Release Bar. Secure Release Pin with a Lock Nut. DO NOT OVER TIGHTEN lock nut.



4) WHILE HOLDING CABLE TAUGHT, position Release Bar 1/4" away from the Anchor Shank. Using Allen Wrench provided, and from the bottom, tighten center set screw first, then **TIGHTEN ALL OF THE SET SCREWS AS HARD AS YOU CAN.**

